

## UCM 30SL

### Integrated electrical cabinet

Integrated removable electrical panel that facilitates maintenance and reduces the free space left between the tank and the wall.

### Manual lid

Manual lid made of stainless steel AISI 304

### Stainless steel INOX 304 satin panels

Stainless steel AISI 304 satin panels

### Digital screen

Intuitive digital screen that makes easy the device control

### Tank drain 3/8"

At the bottom of the tank it's used to empty the main tank. Valve 3/8"



### Regulable feet

Height-adjustable non-slip feet. They allow easy leveling of the machine.


### IP67 buttons grade

IP67 pushbuttons ready to clean the machine surface easily and without risk of short circuits.

### Main characteristics

Ultrasounds power (W)	500
Heating system power (W)	500
Tank capacity (liters)	30
Inner measures LxWxH (mm)	500 x 300 x 250
Static maximum load (kg)	35

### Maximum usefull measures

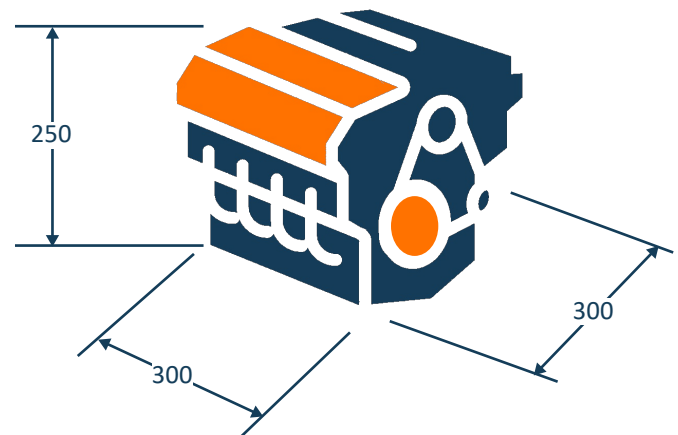

DWS



## Expanded features

Ultrasounds		Included	Optional
Frequency.	28kHz	Yes	38kHz
Power.	500W	Yes	
Swiping.	± 2%	Yes	
Degas mode.		Yes	
Adjustable power.	0% - 100%	Yes	
Remote control	RS485 Modbus RTU	No	No
Controlled from PLC	From the ultrasound setup screen	No	No
Adjustable ramp up	Soft start for special applications	No	No
Heating system			
Power	500W	Yes	
Control type	PT100 probe	Yes	
Elevator			
Oscilation	Oscilation motion with adjustable heigh	No	No
Tramex	removable built in AISI 304 stripped	No	No
Elevator type	Pneumatic	No	No
Machine air inlet	Fast connector 1/4 male	No	No
Working nominal pressure	- bar		
Maximum dynamic load	-kg at - bar		
Lid			
Open mode	Manual	Yes	
Automatic open mode	Pneumatic actuator	No	No
Heat-isolated	thermal and acustic isolation 20mm thickness	No	No
Perimetral gasket	NBR (removable)	No	No
Pours water	stainless steel AISI 304	No	No
Oil separation system			
Auxiliary tank	-	No	No
Adjustable height	Manual	No	No
Other features			
PLC + HMI control	HMI 7" color multi lenguaje	No	No
Stainless steel tank AISI 304	Stainless steel AISI 304 2 mm thickness	Yes	AISI 316
Level control	inductive sensor INOX + PEEK IFM	No	No
Thermal & acustic isolation	Double layer 20mm thickness	Yes	
Electrical cabinet	Integrated for easy access to maintenance	Yes	
Overflow	3/8"	Yes	
Lighting beacon	Integrated with programable colors	No	No
Noise Reduction System (NRS)	Acustic bridge	No	No

DCM ultrasonic  
C/ Massamagrell 26A  
46138 Rafelbunyol (Valencia)

Info@dcmultrasonic.com || www.dcmultrasonic.com || Tel. (+34) 960263665

The information contained in this document is indicative and may be updated without prior notice with the aim of improving our quality and service. Therefore, it does not imply any contractual relationship.